



Instructions
Gebrauchsanleitung
Instrucciones
Istruizione

FLEXi **TESTER**
FTS100

Chlorine
(0.0 - 1.0 mg/l)



WATER TESTING
MADE IN GERMANY


Reagents
Reagenzien
Réactifs
Reactivos
Reagenti



FTS100

TbsRD1
DPD 1 RAPID (free chlorine)

Optional
TbsRD3
50 x DPD 3 RAPID
not included in basic kit

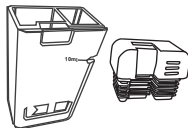

WATER TESTING
MADE IN GERMANY

(GB)

CAUTION!

Reagents for water-analysis only!
Do not eat! Keep away from children!
Store cool and dry!
Clean tester properly before testing!

(F)

Attention!

Les pastilles sont exclusivement destinées aux analyses chimiques. NE PAS AVALER. Tenir hors de portée des enfants. Conserver dans un endroit frais et sec. Bien rincer le testeur avant chaque utilisation!

(E)

¡Atención!

Pastillas para el análisis de aguas, solamente para análisis químicos!
No para tomar!
No debe llegar a las manos de niños!
Consérvese en lugar fresco y seco!
Limpiar el aparato antes de usar!

(I)

Attenzione!

Reagenti unicamente per analisi acqua!
Non ingerire!
Tenere fuori dalla portata dei bambini!
Mantenere in luogo asciutto e fresco
Dopo l'utilizzo pulire ed asciugare accuratamente il tester.

(DE)

Achtung!

Reagenzien nur für chemische Analysen!
Nicht einnehmen! Darf nicht in die Hände von Kindern gelangen! Kühl und trocken lagern!



1

Fill with 10ml of
water to be tested



10 ml

2



1 x DPD N° 1
Rapid

Free Chl. = 1 x DPD 1

Total Chl. = 1 x DPD 1 + 1 x DPD 3


plus 2 Min.

Combined Chl. = Total Chl. - Free Chl.

3




4

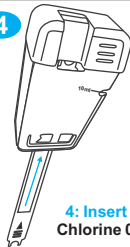

4: Insert FTS100 stick
Chlorine 0.00 - 1.00 mg/l

5

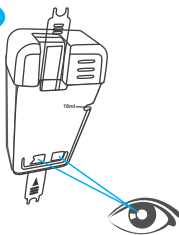

!!! Important !!!

Very high chlorine levels
will bleach out the DPD reagent
and lead to colorless solution!

DPD RAPID tablets
leave a white residue
on the bottom of the tester.
This is normal and does not
interfere with the measurement

no detergent!



clean properly

