



Instructions
Gebrauchsanleitung
Instrucciones
Istruzione

FLEXI **TESTER**
FTS1300

Calcium Hardness
(0 - 500 mg/l)




WATER TESTING
MADE IN GERMANY

Reagents
Reagenzien
Réactifs
Reactivos
Reagenti



FTS1300

TbsHCH1
Calcium Hardness N° 1 Photometer
TbsPCH2
Calcium Hardness N° 2 Photometer

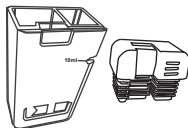

no detergent!



clean properly



WATER TESTING
MADE IN GERMANY

(GB)

CAUTION!

Reagents for water-analysis only!
Do not eat! Keep away from children!
Store cool and dry!
Clean tester properly before testing!

(F)

Attention!

Les pastilles sont exclusivement destinées aux analyses chimiques. NE PAS AVALER. Tenir hors de portée des enfants. Conserver dans un endroit frais et sec. Bien rincer le testeur avant chaque utilisation!

(E)

¡Atención!

Pastillas para el análisis de aguas, solamente para análisis químicos!
No para tomar!
No debe llegar a las manos de niños!
Consérvese en lugar fresco y seco!
Limpiar el aparato antes de usar!

(I)

Attenzione!

Reagenti unicamente per analisi acqua!
Non ingerire!
Tenere fuori dalla portata dei bambini!
Mantenere in luogo asciutto e fresco
Dopo l'utilizzo pulire ed asciugare accuratamente il tester.

(DE)


Achtung!

Reagenzien nur für chemische Analysen!
Nicht einnehmen! Darf nicht in die Hände von Kindern gelangen! Kühl und trocken lagern!




1


Fill with 10ml of
water to be tested

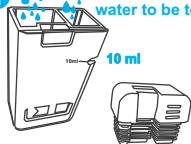

2

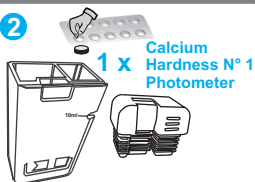


3

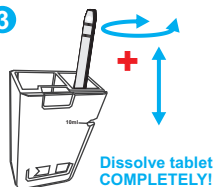


Dissolve tablet
COMPLETELY!

4

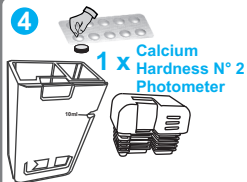

5

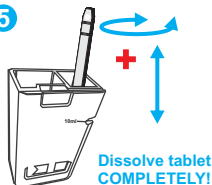


Dissolve tablet
COMPLETELY!

2 min.



6

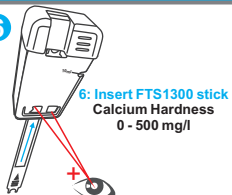

6: Insert FTS1300 stick
Calcium Hardness
0 - 500 mg/l

no detergent!



clean properly

